

Connecting Wind Steer Feature (apparent wind angle)

The Pelagic can adjust steering angle based on the apparent wind direction

To enable the Wind Steer feature, the Pelagic needs to receive wind input directly from the NMEA 0183 network or from an NMEA 2000 network via a gateway

In NMEA terms, the Pelagic will be looking for the sentence “xxVWR” to receive its wind input

Connect the small Green (+) and Black (-) wires from the Drive box to your NMEA output, using OUT+ and OUT- on your NMEA output port. Note various manufactures may use slightly different terms for the NMEA0183 inputs and outputs. These wires are located in the unused bundle of wires coming out of the back of the Drive box, with the ends wrapped in heat shrink tubing.

- Carefully cutaway the heat shrink tubing and identify the Green and black wires
 - Note that there may be 3 black wires, in which either can be used as NMEA ground

