


Base Station & Wireless Controller Installation guide


Fitting remote

Cradle at fixed position


1. Mark holes for the fixing screws.

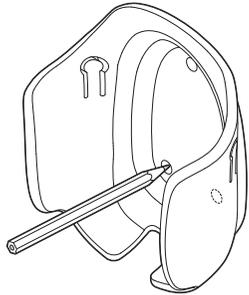


2. Drill three 1/8 inch (3.4 mm) pilot holes for the fixing screws

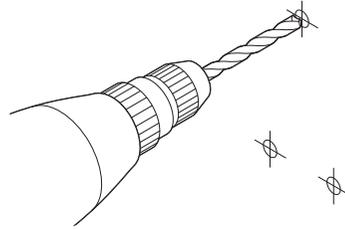

3. Countersink the pilot holes to prevent damage to the mounting surface.

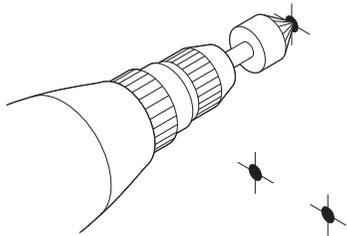

4. Use the three No. 8 screws to secure the cradle to the mounting surface

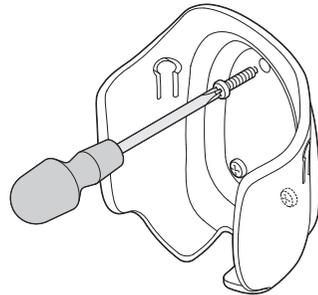

Parts supplied


Base Station



No. 6 size
No. 8 size
Self-tapping screws




S100 Remote OR

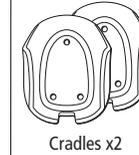


Cradles x2
AAA batteries x2

Smart Controller

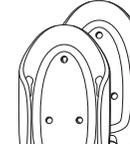

Cradles x2

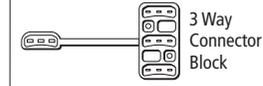

3 Way
Connector
Block



Ferrite



SeaTalk Cable




Charging Cable

Tools Required



Power Drill

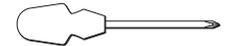


Pozidriv screwdriver



1/8 inch (3.4 mm) drill

7/64 inch (2.7 mm) drill




Locating Base Station

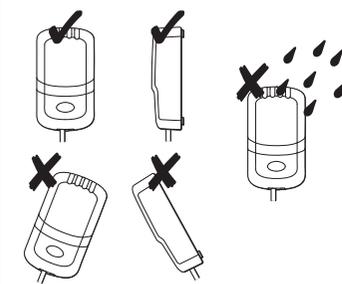

Fit as high up as possible, in a dry location

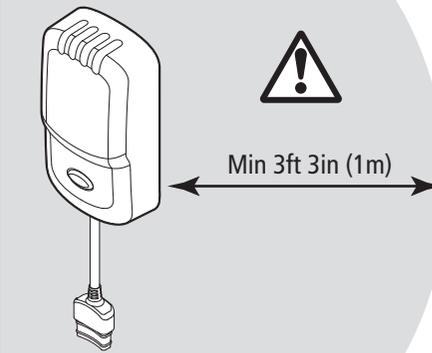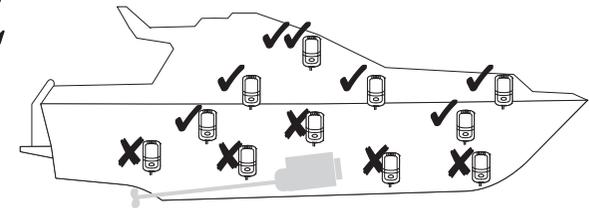

Min 3ft 3in (1m)

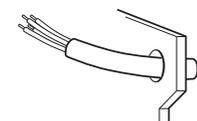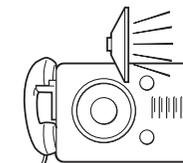 

Raymarine®


Document: 87042-5

Date: 03-2019


www.raymarine.com

Fitting Base Station


1. Remove cover

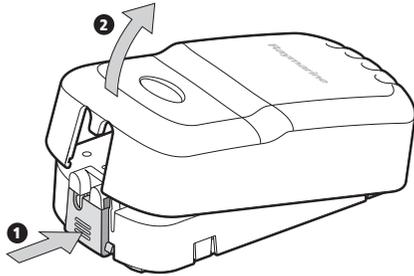


2. Mark holes for the fixing screws.

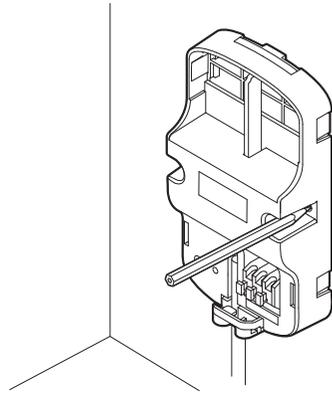


3. Drill two $\frac{7}{64}$ inch (2.7 mm) pilot holes for the fixing screws

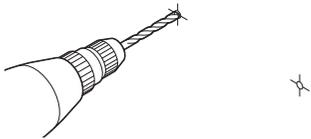


4. Countersink the pilot holes to prevent damage to the mounting surface

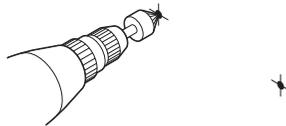

5. Use the two No. 6 screws to secure the Base Station to the mounting surface

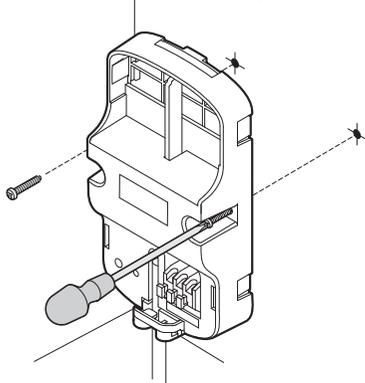


6. Replace cover

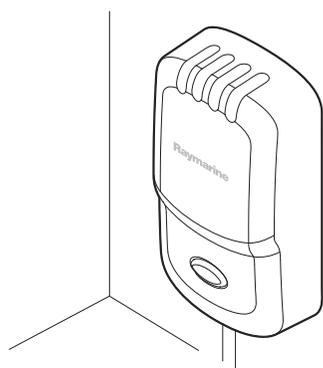

Connecting Base Station

Important:
Before connecting the Base Station, ensure that the 12 V supply on the associated SeaTalk system is protected by a 5 A fuse.

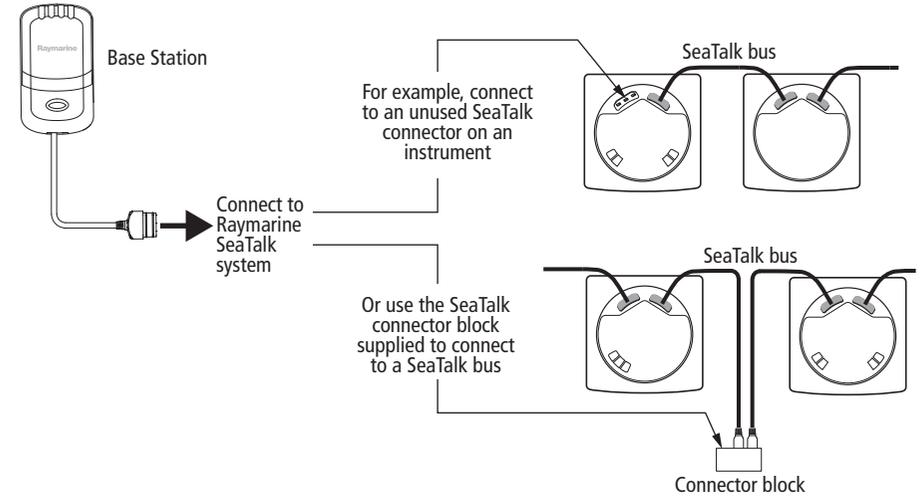

Note:

If necessary, you can remove the SeaTalk connector from the Base Station cable, to make direct connections to SeaTalk, e.g. at a Raymarine course computer.

SeaTalk color coding:


Yellow : SeaTalk data

Red: +12 V


Screen: 0 V

Connecting Smart Controller charging cable


Clip ferrite onto cable, near to connector

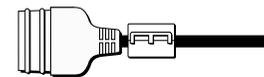

Connect cable via 2 A fuse to 12 V supply

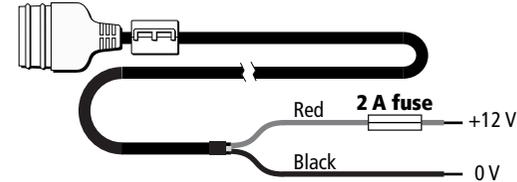

Fitting batteries to S100 Remote

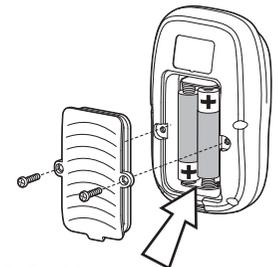

Fit 2 x AAA batteries (supplied).

When replacing, use only high-quality alkaline, AAA size batteries.